


REMEMBER ... CALL 811 BEFORE YOU DIG!

1. Customer's equipment must be approved by a State of Oregon certified electrical inspector.
2. A building permit is required and an electrical inspection must be passed prior to connection.
3. Service will not be energized until installation meets all EPUD specifications.

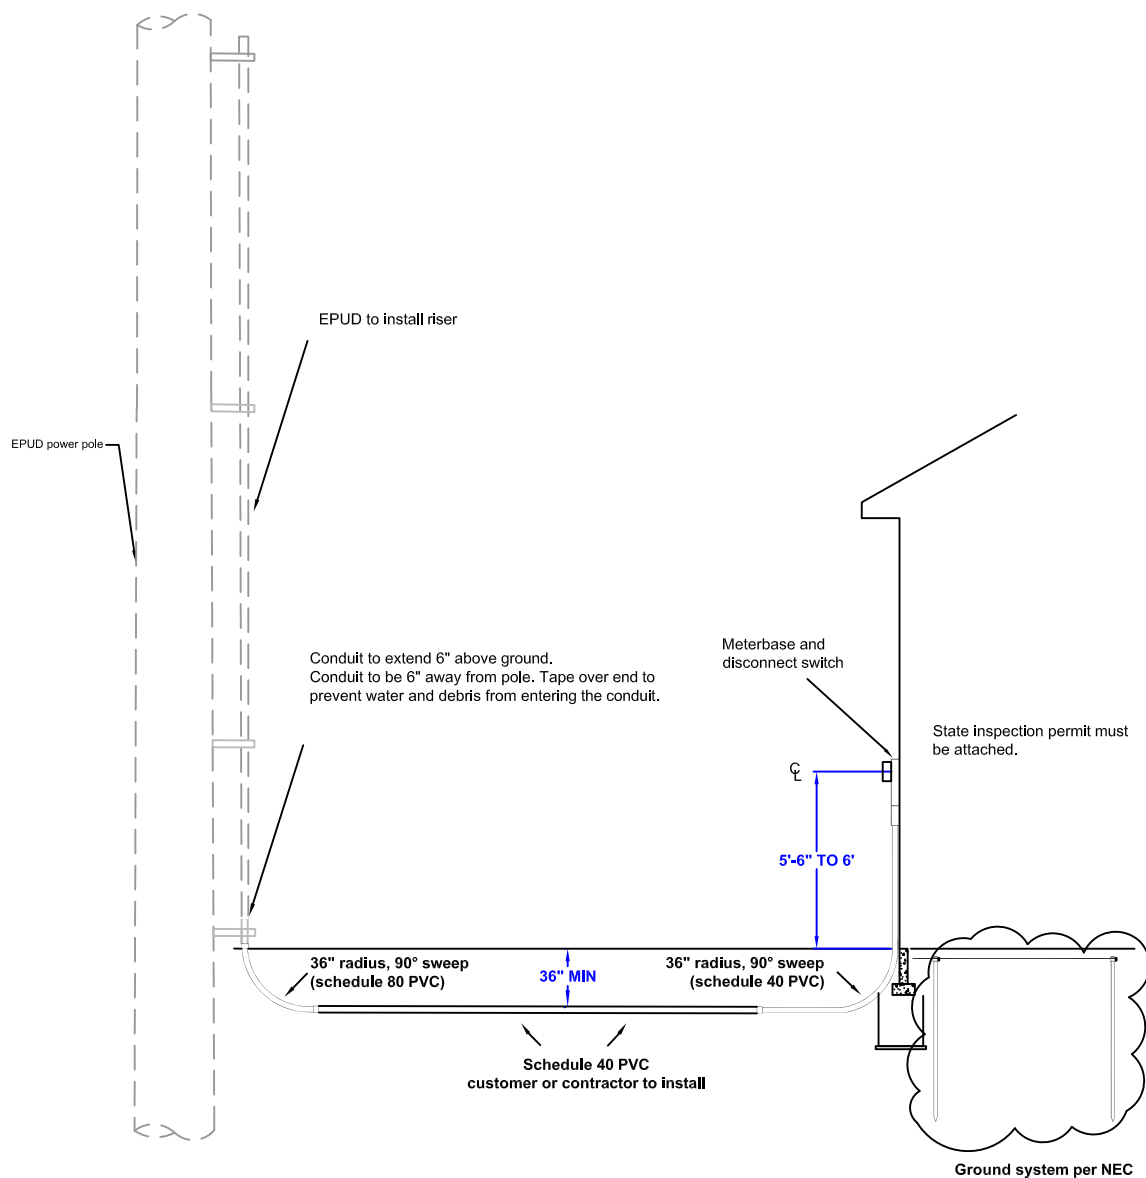

NOTES:

1. 200 amp svc = 2" sch 40 PVC grey electrical conduit
2. 320 amp svc = 3" sch 40 PVC grey electrical conduit
3. Install pull string or polypropylene rope
4. Riser set 6" away from pole
5. End bells shall be installed on all conduits coming into all ground sleeves, concrete vaults, and junction boxes.