


## REMEMBER ... CALL 811 BEFORE YOU DIG!

1. Customer's equipment must be approved by a State of Oregon certified electrical inspector.
2. A building permit is required and an electrical inspection must be passed prior to connection.
3. Service will not be energized until installation meets all EPUD specifications.

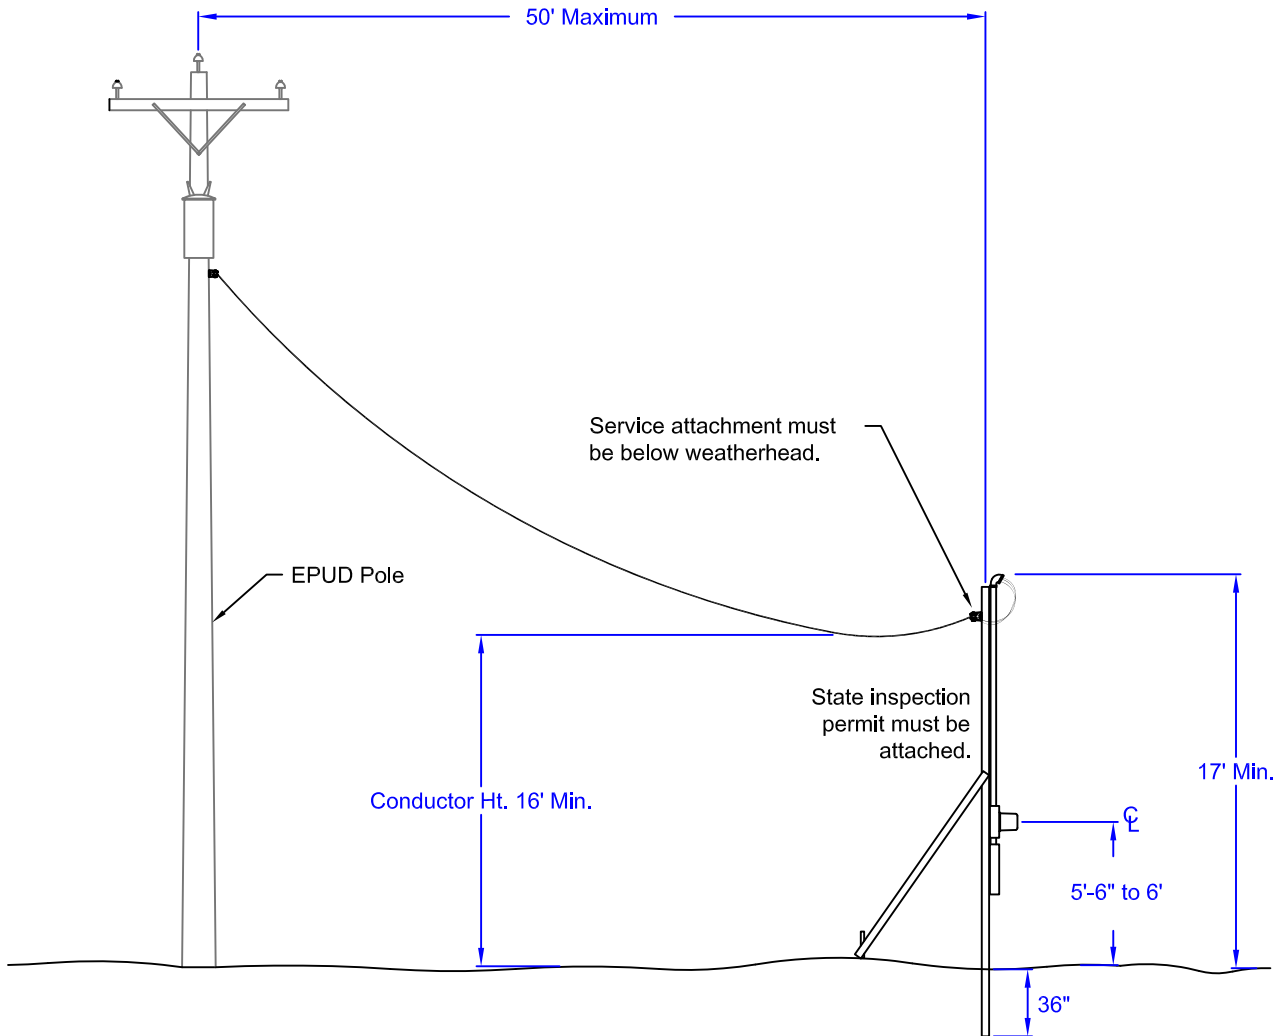

### NOTES:

1. Customer's temporary service pole will be of 4" x 4" solid lumber.
2. Braces should be of 2" x 4" lumber with stakes solidly driven into ground and firmly attached to braces.