


## REMEMBER ... CALL 811 BEFORE YOU DIG!

1. Customer's equipment must be approved by a State of Oregon certified electrical inspector.
2. A building permit is required and an electrical inspection must be passed prior to connection.
3. Service will not be energized until installation meets all EPUD specifications.

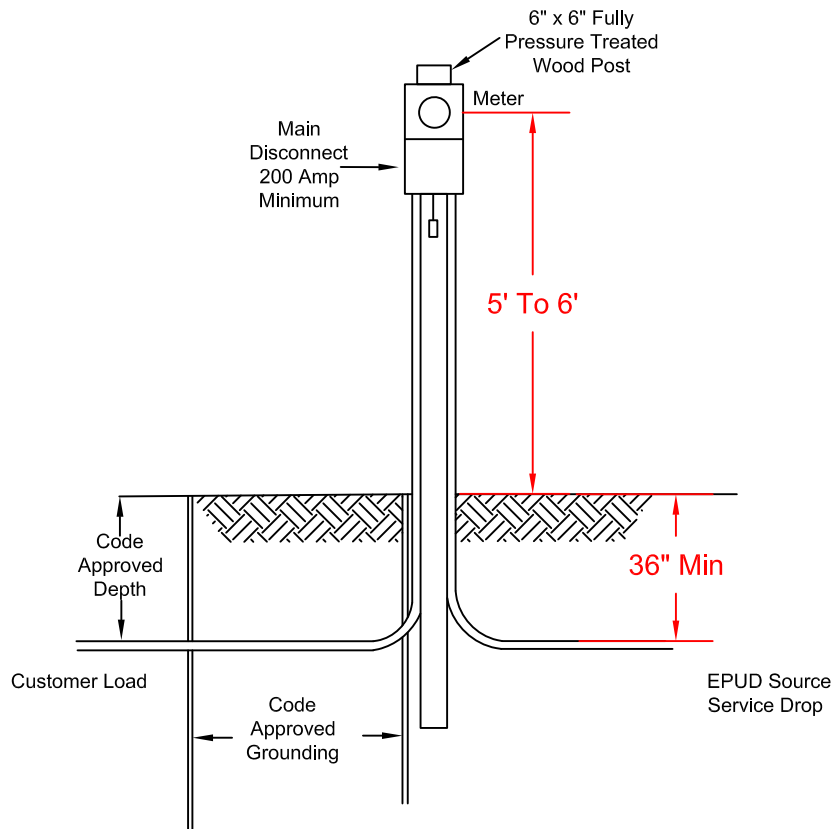

1. All electrical connections, equipment and equipment grounds shall comply with the National Electric Code.
2. The customer/electrician shall furnish and maintain a 6" x 6" x 10' pressure treated wood post, all conduit, conduit straps, grounds, meterbase, disconnects and electrical cable beyond the meter.
3. EPUD Shall furnish and maintain the meter and electrical cable from EPUD equipment (i.e. transformers or secondary junction) to the meter.
4. Before EPUD energizes the meterbase, the base must be inspected and approved by the State or City Electrical Inspectors. The service trench must be inspected and approved by EPUD personnel and then completely backfilled.