


**REMEMBER ... CALL 811 BEFORE YOU DIG!**

1. Customer's equipment must be approved by a State of Oregon certified electrical inspector.
2. A building permit is required and an electrical inspection must be passed prior to connection.
3. Service will not be energized until installation meets all EPUD specifications.

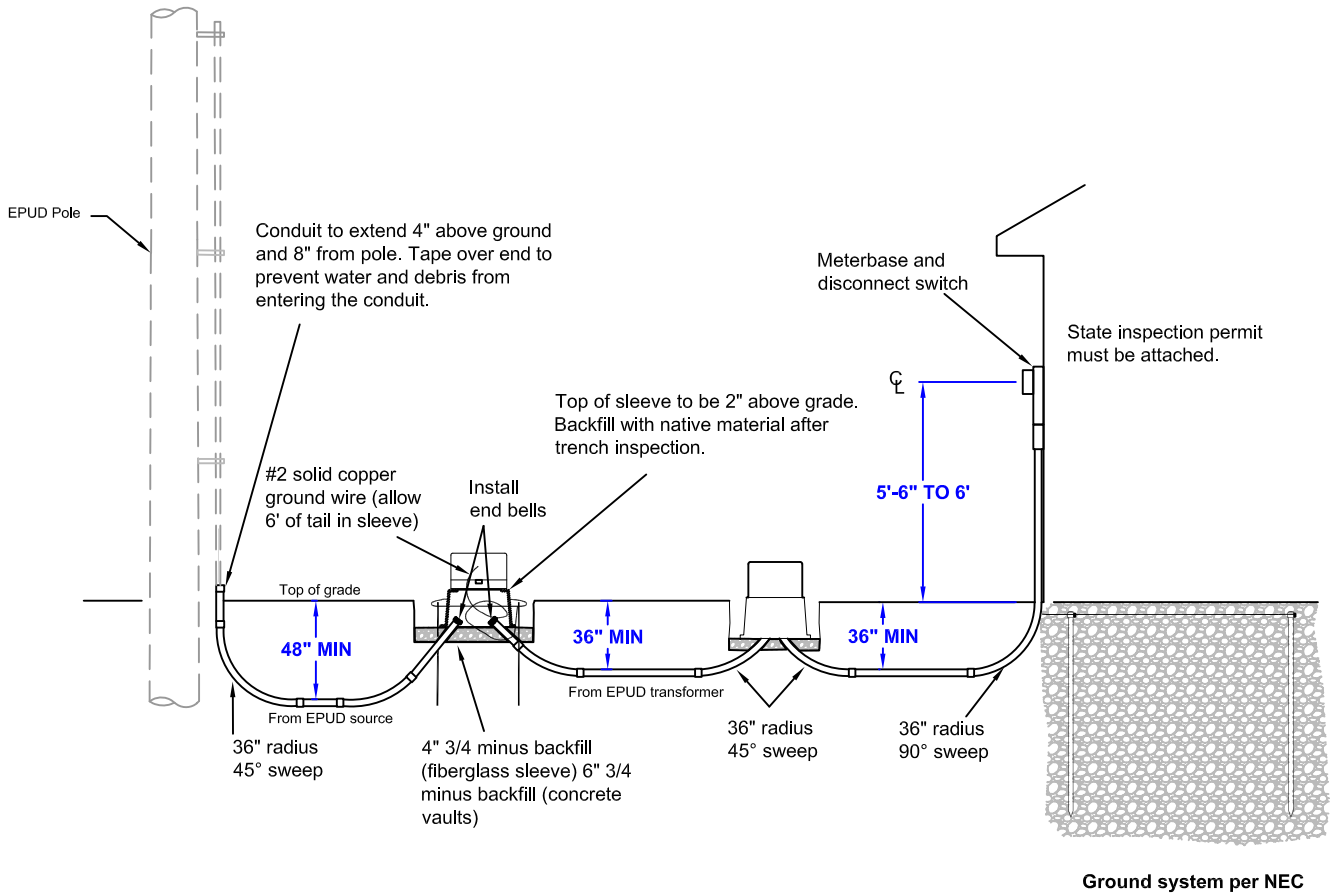

**NOTES:**

1. Install 1/8" polypropylene rope through all conduit.
2. End bells shall be installed on all conduits coming into all ground sleeves, concrete vaults, and junction boxes.